

## SAMSUNG OFFICESERV TIME & DATE CHANGE PROGRAMMING GUIDE

### TO CHANGE TIME AND DATE ON THE SAMSUNG HANDSETS

From any handset press the **Transfer key** and dial **200**,  
the display will show ENABLE CUS. PROG. & PASSCODE :

Enter customer passcode which is **1234**

Press **1** to ENABLE CUS. PROG, then press the **Speaker Key**

Enter the time & date programme by dialling **505**

The Time and Date format is as follows:

W (Day of the week, 0-6): e.g., enter **0** for Sunday and **6** for Saturday.

MM (Month, 01-12): e.g., enter **01** for January and **12** for December.

DD (Day of the month): enter a number in the range **01–31**.

YY (Year): enter the last two digits of the year, e.g. **07**.

HH (Hours):24-hour clock enter a number in the range **00–24**.

MM (Minutes): enter a number in the range of **00–59**.

**ENTER THE DATE AND TIME AND THEN PRESS TRANSFER KEY TO EXIT**



### HEADSET COMPATIBLE

All Samsung digital handsets are  
headset compatible, please contact  
your account manager for options  
and prices

Tel: 0845 88 88 698

FOR MORE TECHNICAL TIPS PLEASE VISIT

**WWW.PRPTTELECOM.CO.UK**